

## Albrecht Tectalk Outdoor programming software

### Disclaimer:


Please note that increasing the transmitting power or using frequencies other than the 16 pre-programmed frequencies will invalidate the operating licence of the radio.

### Programming:

1. Start the programming mode of the radio by switching the radio off and then pressing and holding the down key [▼] while switching the unit on again. The message "Pr---" appears in the display.



2. Connect the radio to the PC using the programming cable.
3. Start the programming software. First select model CP229 in the menu "Select Model". Then select the COM port of the programming cable under "Select COM Port". If several COM ports are active on your PC, use the Windows tool "Device Manager" to find the correct COM port.

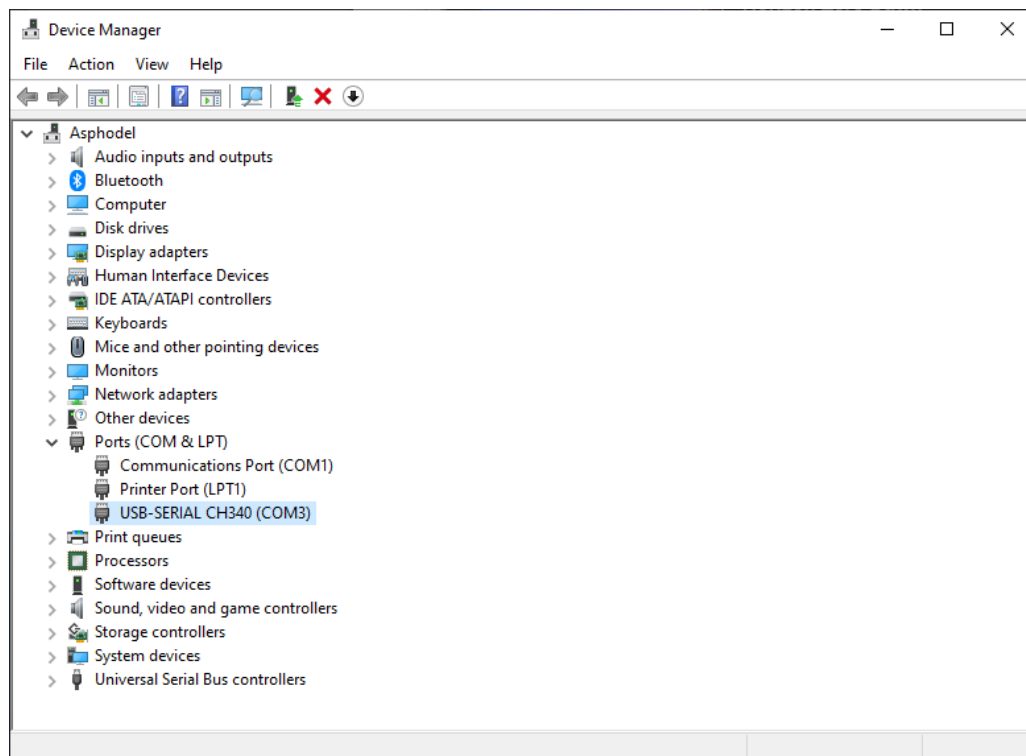

4. The current configuration of the radio can be read via the "Read Radio" button. You can now remove or add channels (please note the disclaimer at the beginning of this document) or assign CTCSS or DCS tones to the channels. Then programme the radio using the "Write Radio" button. After successful programming, the radio shows the message "done" in the display.

